



Atik Titan User Manual

Version 1.1 - August 2011



Table of contents

1 Introduction.	<u>3</u>
1.1 Further information.	3
2 Pack Contents.	<u></u> 4
3 Getting to know your camera.	5
3.1 Camera Parts.	5
3.2 Sensor.	<u>5</u>
3.3 Optical Window.	<u>5</u>
3.4 Analog to Digital Converter (ADC).	5
3.5 Power Consumption.	6
3.6 USB Port	6
3.7 Cooling.	6
4 Technical Information Summary.	7
5 Planetary (high-speed) Imaging.	8
6 Declaration of Conformity	9
6.1 Disposal of the camera.	9
7 Warranty	10

1 Introduction

Congratulations on your purchase of an Atik Titan, the most versatile camera available for astro-imaging today. This three-in-one camera is your perfect observing partner whether you want to do planetary imaging, deep-sky work or autoguiding. This manual will help you get the most out of your Atik camera: please take the time to read it thoroughly, and you will be ready to discover new worlds.

Atik cameras provide exceptional value for money, superior performance and unrivalled ease of use. Our cameras are the result of extensive research and development, each one having been designed and built with the requirements of the most demanding astro-imager in mind. Your Atik camera incorporates state-of-the-art design and materials, and it will be your trusted astro-photography companion for a long time to come.

Repairs, servicing and upgrades are available through your local dealer or at http://www.atik-cameras.com.

Please note that modifications to the camera and/or accessories which are undertaken without the manufacturer's written permission will void the warranty, details of which are given at the back of this manual.

1.1 Further information

For installation instructions and other useful information please refer to the quickstart guide which was shipped with the camera. Information on the software is given in the ArtemisCapture guide, a PDF file of which is copied to your computer hard drive by the software installer. Further information is available on our website at http://www.atik-cameras.com.

2 Pack Contents



- 1. Atik Titan
- 2. USB cable
- 3. Car lighter type power cable4. CD with software and manuals
- 5. Quick start guide

3 Getting to know your camera

3.1 Camera Parts





- 1. ST-4 compatible autoguider port
- 2. 2.1mm centre-positive 12V DC input
- 3. USB port
- 4. Cooling outlet
- 5. 1.25" nosepiece with T2 (M42 x 0.75mm pitch) thread
- 6. Cooling inlets

3.2 Sensor

The sensor inside your camera is a Sony ICX424 (the full technical data sheet is available at http://www.atik-cameras.com/external/ICX424AL.pdf).

3.3 Optical Window

The 2mm-thick optical window is BK7 glass with BBAR coatings on both sides to minimize unwanted reflections.

3.4 Analog to Digital Converter (ADC)

Your Atik Titan is equipped with a 16-bit ADC, allowing it to record subtle levels of grey which will provide you with enhanced dynamic range when capturing an image.

3.5 Power Consumption

Your Atik Titan was designed to have very low power consumption, drawing only 550mA at 12V DC with the cooler running. It is possible to run the camera without cooling using the USB power alone. The 2.1mm centrepositive DC input is compatible with a wide range of 12V DC supplies.

WARNING: If you have purchased the optional mains power adaptor, please note that it is for indoor or observatory use only. There is a risk of electric shock if the adaptor is used in damp environments or outside. If in doubt do not use the adaptor and consult a trained electrician.

3.6 USB Port

The Atik Titan uses a USB 2.0 high-speed interface, allowing for a full-frame download in approximately 100ms when using the supplied Artemis Capture application. Artemis Capture also provides a higher speed "preview" mode, which allows a full frame to be downloaded in approximately 50ms.

3.7 Cooling

Your Atik Titan is equipped with a Peltier thermoelectric element which cools the camera to approximately 20° C below ambient temperature. After switching on the camera it is advisable to allow at least 2 minutes before taking images, in order to allow the temperature to stablilize.

4 Technical Information Summary

Sensor Type Horizontal Resolution Vertical Resolution

Pixel Size ADC

Readout Noise (Typ.)

Interface Power

Maximum Exposure Length Minimum Exposure Length

Cooling Weight

Distance from top of T-thread to CCD

Window thickness
Autoguider port pinout

Sony ICX424 659 pixels 494 pixels

 $7.40 \mu m \times 7.40 \mu m$

16 bit 6e⁻

USB 2.0


12v DC 0.55A Unlimited

1ms

Thermoelectric, $\Delta T = -20^{\circ}C$

Approx. 350g approx 13 mm

2mm



1 - NC

2 - GND

3 - West

4 - South

5 - North

6 - East

5 Planetary (high-speed) Imaging

The Atik Titan can take up to 15 frames per second and store them in uncompressed 16-bit format on a standard hard disk drive. In order to do high-speed imaging using Capture, the following steps must be taken:-


- check the Pre checkbox in the Exposure dialog this enables the fast download mode;
- set a suitable exposure time in the Exposure dialog note that high frame rates require short exposure times;
- check the Autosave Images checkbox in the Exposure dialog;
- enter a suitable folder and file name prefix in the text box below the
 Autosave Images checkbox (or use the browse button alongside it);
- select a suitable suffix scheme from the Seq fmt. drop-down list;
- enter your desired starting sequence number in the **Seq No.** text box;
- start imaging by selecting the Camera | Loop menu option or else by clicking on the Loop toolbar item;
- stop imaging by deselecting the **Camera | Loop** menu option or else by clicking on the **Loop** toolbar item again.

Please ensure that your hard disk drive has enough space available for your proposed observing run – in high-speed imaging mode the Titan eats up disk space very quickly! Performance will be improved by minimizing the number of other processes running on the system. If the frame rate is reduced by hard disk performance limitations, you might be able to improve it by using a RAM disk, such as the one provided by Dataram (see http://memory.dataram.com/products-and-services/software/ramdisk/download-ramdisk).

A major advantage of operating in high-speed imaging mode is that it allows you to capture moments of steady seeing, which can then be selected and stacked to produce far sharper images than could be achieved with longer exposure times. Registax is a freeware program which is designed to make this post-processing as easy as possible: please refer to the Registax website (http://www.astronomie.be/registax/index.html) for further details.

Registax will process and stack RGB images taken through different colour filters provided that the files are saved with the suffixes **_R**, **_G** and **_B**, to indicate the colour channel. The easiest way to achieve this is by setting up an observing sequence as shown on the right.

Registax can also debayerize images taken with one-shot colour cameras.

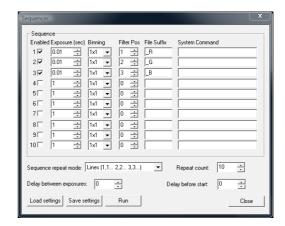

6 Declaration of Conformity



This product carries the CE Mark in accordance with the related European Directive. CE Marking is the responsibility of:

Perseu, SA R. Dr. Agostinho Neto, 1D 2690-576 Sta Iria da Azoia Portugal

Critical Applications.

This product is not designed for any "critical applications". "Critical applications" means life support systems, medical applications, connections to medical devices, commercial transportations, nuclear facilities or systems or any other applications where product failure could lead to injury to persons or loss of life or catastrophic property damage.

This product is not a toy.

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take appropriate measures.

6.1 Disposal of the camera

When no longer required do not dispose of this electronic device with general household waste. To minimise pollution and protect the environment the camera should be recycled. Local recycling drop off points available under the Waste from Electrical and Electronic Equipment (WEEE) regulations which will accept the camera. For further information contact Perseu SA at the above address, or the shop from which the camera was bought.



7 Warranty

The equipment is guaranteed against defective design, manufacture or materials for a period of one year from the date of purchase.

This means that Atik Cameras will repair or replace the equipment at its sole option, at no charge to the purchaser for parts or for labour, if the fault is reported within the guarantee period, provided however that Atik Cameras is able to duplicate the defect or problem at its facilities. This warranty does not apply to damage that occurred as a result of abuse or misuse, abnormal service or handling, damage which may have been caused either directly or indirectly by another product, or if the equipment has been altered or modified in any way, or if the damage was caused by repairs or service provided or attempted by anyone other than Atik Cameras. This warranty does not include or provide for incidental or consequential damages.

To exercise your rights under this warranty, you must return the equipment to the dealer from whom it was purchased together with proof of purchase and a clear description of the fault. If it's not possible to return the equipment to your dealer, you should contact Atik Cameras. Equipment returned to Atik Cameras must be sent in appropriate packaging and at your expense (insurance is recommended), together with proof of purchase, a return address and a clear description of the fault.

This does not affect your statutory rights.